

Thread the untied end of the replacement cord all the way through one handle and one bumper. Route the knot around the handle plug. See photo J. Install the handle plug inside the handle.



photo J

Tie a double overhand knot at the black mark near the end of the handle cord. See photo K. Pull the knot tight and slide the bumper down over the knot. See photo L.



photo K

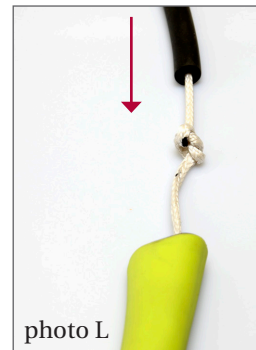


photo L